
# FORENO.

## **NEOCLASSIC**

Basin Faucet H-T Ceramic Chrome NBF4HT

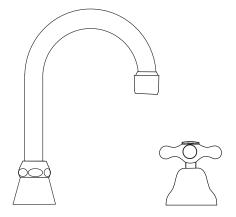



Congratulations on your purchase of this high quality product from Foreno Tapware.

Please read the following before installation and retain (along with your receipt) for future reference.

#### **TECHNICAL SPECIFICATIONS**

#### **Suitable for All Pressures**

Minimum Pressure = 17kPa

Maximum operating Pressure = 500kPa\*

(As per NZ Building Code AS/NZ 3500.1)

Maximum operating Temperature = 65 deg. Celsius

For domestic use only.

#### CONFIGURATION

Mains Pressure systems Change aerator to mains (supplied).

Unequal Low Systems Install as supplied.

Equal Low systems Install as supplied.

### KEY COMPONENTS Spout Flat Washer Backnut H/C Indicator Handle Screw Handle Flange Back Nut Flat Washers Back Nut Headworks Tap Body 160m Breech Pipe Compression nut

#### **INSTALLATION**

FOR PRESSURES EXCEEDING 500kPa INSTALL A PRESSURE REDUCING VALVE. THOROUGHLY FLUSH ALL PIPES TO ELIMINATE ANY REMAINING DIRT AND RESIDUE, AND INSTALL INLINE FILTERS. FAILURE TO DO SO MAY VOID THE WARRANTY.

- 30mm holes are required for each tap body and 24mm hole for the spout spigot. NB: The vanity top thickness must not exceed 22mm.
- The tap bodies may be spaced at between 150mm & 210mm hole centres.
- Once the holes are drilled, wind the back-nuts (see diagram, item 8) back on the tap bodies to allow for a minimum 4 thread protrusion above the vanity top.
- Cut the breech pipe (item 13) to the correct size.
- Fit the centre spout with a bead of silicone sealant spread around inner lip of mounting flange.
- Fit flat washer (item 2) on the top and flanged back-nut (item 3) underneath then tighten.

ATTACH PROOF OF PURCHASE HERE

- Fit the breech pipe to the tap bodies and push the centre spigot into the spout tail and the tap bodies into the drilled holes.
- Place the mounting washers and flanges on the tap bodies and tighten down.
- Tighten compression nut and olive (items 14 & 15) on either end of the breech pipe.
- Place handles on and screw on Indicator nuts (item 4). NB: This mixer has been configured to perform on low pressure. If you have mains pressure system, change aerator to the WELs rated one supplied.
- Turn on water supply. Check for leaks.

#### **WARRANTY**

#### PLEASE CALL US BEFORE REMOVING TAPWARE OR UNDERTAKING ANY REPAIR WORK.

Please refer to our website for warranty information:

#### www.foreno.co.nz/warranty

In the unlikely event that this product fails during its warranty period, phone our Customer Service team immediately on 0508 FORENO (0508 367 366) – as unauthorised removal of the product may void the warranty.

#### CARE AND MAINTENANCE

#### SHOULD NOT BE CLEANED WITH ACIDIC, CAUSTIC/ALKALINE, ABRASIVE OR CITRIC CLEANERS.

A soft, damp cloth is recommended for cleaning (Not a Micro fibre cloth). Mild soap solutions can also be used on occasion.

See FORENO. website for full care instructions:

www.foreno.co.nz/tapware-care-instructions/

PROUD PARTNER AND SUPPORTER OF MASTER PLUMBERS, GASFITTERS AND DRAINLAYERS





