


# X-Factor Sink Faucet **XFAC1W**

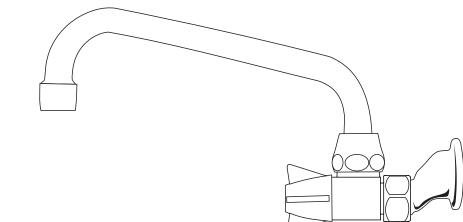

Handle (different for

each range)

Rubber

Washer

Aerator

Insert Aerator Housing

111

-

Spout (different for

> Mounting washer

Back-nut

**Changing Aerator for** 

**Mains Pressure only** 

each range)

Mounting Nut

Offeet



# **TECHNICAL SPECIFICATIONS**

#### Suitable for All Pressures

Minimum Pressure = 17kPa Maximum operating Pressure = 500kPa Maximum operating Temperature = 65 deg. Celsius

For domestic use only.

## CONFIGURATION

Mains Pressure systems Remove the aerator insert from the

	housing and change to the mains
	pressure insert supplied. See diagram.
Unequal Low Systems	Install as supplied.

Equal Low systems Install as supplied.

## INSTALLATION

## For pressures exceeding 500kPa install a pressure reducing valve. Failure to do so may void the warranty.

- Fit offsets and body to wall mounted wing backs and adjust width to match the faucet body back-nuts. NB: It is essential to apply either Teflon sealing tape or graphite & hemp around the screwed tube prior to installation.
- Fit mounting washers to the faucet body back-nuts and tighten back-nuts on to offsets. NB: Do not over-tighten, no thread tape is required.
- Fit the centre spout.
- Push spout on faucet body, being careful not to push past split collar. Mounting nut to be tightened down with adjustable spanner.

Turn on water supply. Check for leaks.

#### WARRANTY

•

Please refer to our website for warranty information: www.foreno.co.nz/warranty

In the unlikely event that this product fails during its warranty period, phone our Customer Service team immediately on 0508 FORENO (0508 367 366) – as unauthorised removal of the product may void the warranty.

#### CARE AND MAINTENANCE

Chrome-plated finishes should not be cleaned with astringent, abrasive or citric cleaners. A soft, damp cloth is recommended for cleaning. Mild soap solutions can also be used on occasion.

PROUD PARTNER AND SUPPORTER OF MASTER PLUMBERS, GASFITTERS AND DRAINLAYERS

