

# FORENO.

TAPWARE MADE FOR NEW ZEALAND since 1969

## Toilet Handspray Set

### FORPT96

Congratulations on your purchase of this high quality product from Foreno Tapware.  
Please read the following before installation and retain (along with your receipt) for future reference.

This product must be installed by a suitably qualified tradesperson.

The Foreno Toilet Handspray Set is designed to fit on the wall beside the toilet pan on a wall bracket (supplied), and connects to an isolating cistern tap (not included). **The isolating cistern tap connected to the hose must be turned off when the handpiece is not in use.**

A suitable Backflow prevention valve must be fitted at time of installation of this set to comply with Building Standard G12/AS1 Acceptable Solution; Protection of Potable Water Supplies from Backflow.

#### TECHNICAL SPECIFICATIONS

##### Suitable for Mains Pressure only

Minimum Pressure = 150kPa

Maximum operating Pressure = 500kPa (as stated in the NZ Building Code)

Maximum operating Temperature = 65 deg. Celsius

For domestic use only.

#### CONFIGURATION

Mains Pressure systems Install as shown in the diagram.

Unequal Low systems This product is not suitable for this type of water pressure.

Equal Low systems This product is not suitable for this type of water pressure.

#### CONTENTS

- Solid brass, lever-action handpiece
- Chrome plated wall bracket
- 1200mm pressure hose
- Flow regulator washer (prefitted in pressure hose)
- Brass female T connector
- Fittings pack (washers, screws, wall anchors)


#### REQUIRED FOR INSTALLATION

- Backflow prevention valve
- Isolating Cistern Tap

## INSTALLATION

**\*FOR PRESSURES EXCEEDING 500kPa INSTALL A PRESSURE REDUCING VALVE. THOROUGHLY FLUSH ALL PIPES TO ELIMINATE ANY REMAINING DIRT AND RESIDUE, AND INSTALL INLINE FILTERS. FAILURE TO DO SO MAY VOID THE WARRANTY.**

- Turn off water supply to the existing cistern tap.
- Remove hose from the cistern tap.
- Remove the cistern tap from the wall.
- Attach the 15mm female T connector to the wall connection.
- Fit an additional isolating cistern tap (not included) to the T connector, see diagram.
- Ensure the flow regulator is fitted between the hose and isolating tap.
- Fit a black washer into the handpiece end of the pressure hose, then attach the small, knurled end of the hose to the Isolating tap, and attach long tapered end to the handpiece.
- Fit the original cistern tap to the T piece and reconnect the cistern hose.

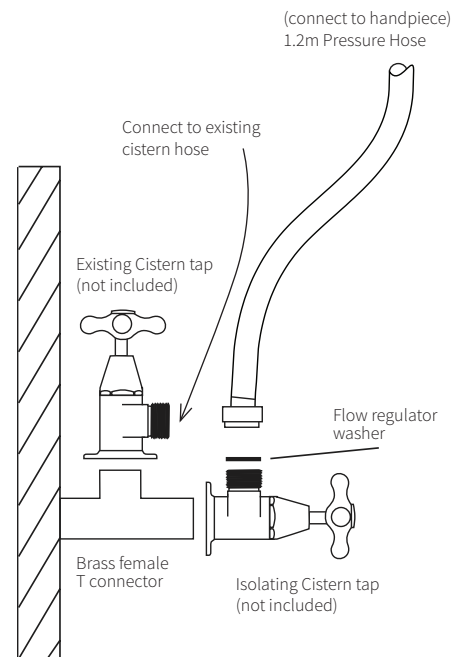

## - ENSURE A COMPLIANT BACKFLOW PREVENTION VALVE IS INSTALLED BEFORE TURNING ON MAINS WATER SUPPLY

- Turn on water supply.
- Check for leaks and for proper operation of the handpiece.
- Fit wall bracket in a suitable position using wall anchors, ensuring hose isn't stretched.

**IMPORTANT: Turn off the the cistern tap that is connected to the handpiece hose when not in use. Do not submerge handpiece in water.**

## WARRANTY

**PLEASE CALL US BEFORE REMOVING TAPWARE OR UNDERTAKING ANY REPAIR WORK.**

Please refer to our website for warranty information: [www.foreno.co.nz/warranty](http://www.foreno.co.nz/warranty)

In the unlikely event that this product fails during its warranty period, phone our Customer Service team immediately on 0508 FORENO (0508 367 366) – as unauthorised removal of the product may void the warranty.

## CARE AND MAINTENANCE

**SHOULD NOT BE CLEANED WITH ACIDIC, CAUSTIC/ALKALINE, ABRASIVE OR CITRIC CLEANERS.**

A soft, damp cloth is recommended for cleaning (Not a Micro fibre cloth). Mild soap solutions can also be used on occasion.

ATTACH PROOF OF PURCHASE HERE