



# FORENO.

## LUXJET Slide Shower Chrome FSL9



Congratulations on your purchase of this high quality product from Foreno Tapware.

Please read the following before installation and retain (along with your receipt) for future reference.

### TECHNICAL SPECIFICATIONS

#### Suitable for Mains Pressure only

Minimum Pressure = 150kPa

Maximum operating Pressure = 500kPa

Maximum operating Temperature = 65 deg. Celsius

For domestic use only.

### CONFIGURATION

Mains Pressure systems Install as supplied.

Unequal Low Systems Not suitable.

Equal Low systems Not suitable.


### INSTALLATION

**For pressures exceeding 500kPa install a pressure reducing valve. Failure to do so may void the warranty.**

**CAUTION: If using your own screws to install the wall brackets, DO NOT use counter sunk type screws as this will void the warranty.**

See diagrams on next page (steps 1-5).

1. Insert rose, attach hose with conical end to the rose.
2. Attach the supply elbow to the supply connection on the wall.
3. Turn on water supply. Check for leaks.

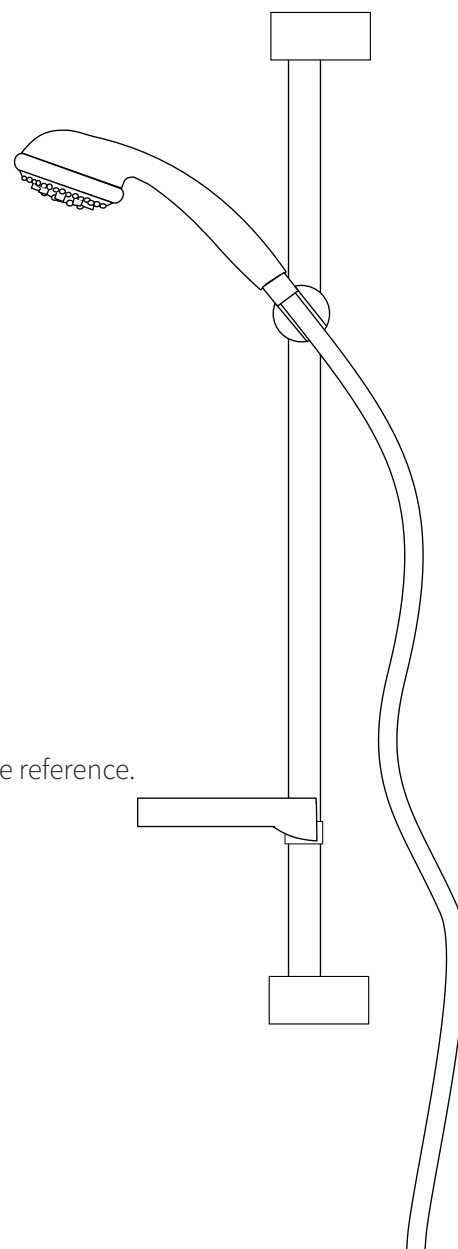

ATTACH PROOF OF PURCHASE HERE

**WARRANTY**

Please refer to our website for warranty information:


[www.foreno.co.nz/warranty](http://www.foreno.co.nz/warranty)

In the unlikely event that this product fails during its warranty period, phone our Customer Service team immediately on 0508 FORENO (0508 367 366) – as unauthorised removal of the product may void the warranty.


**CARE AND MAINTENANCE**

**NOT TO BE CLEANED WITH A STRINGENT, ABRASIVE OR CITRIC CLEANERS.**

A soft, damp cloth is recommended for cleaning. Mild soap solutions can also be used on occasion.

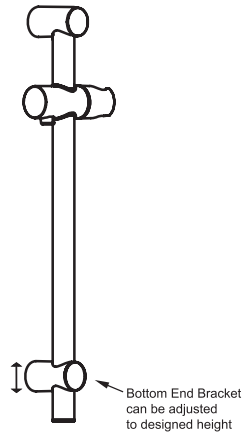


**STEP 3**

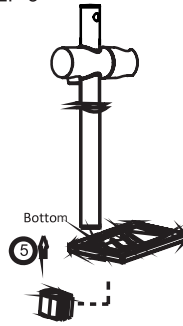


5. Attach soap dish to support then slide this assembly on the tube.

**STEP 1**

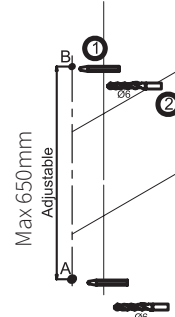


1. Measure and mark hole position with pencil.  
2. Drill mounting hole with 6mm drill bit.

**STEP 2**

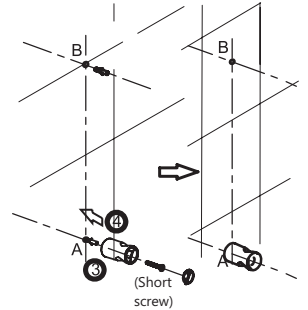

3. Push wall plugs into 6mm holes.  
4. Place Holder over top wall plug and fix in position with screw

**STEP 4**

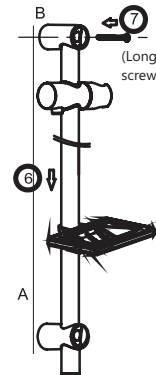


6. Slide the tube into holder then fit holder B over tube.  
7. Fix in place with screw into wall plug B.

**STEP 5**



8. Clip holder covers onto Holder A and Holder B.

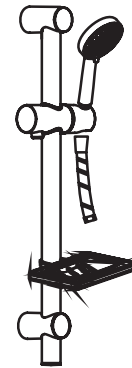

Assembly Complete

PROUD PARTNER AND SUPPORTER OF MASTER PLUMBERS, GASFITTERS AND DRAINLAYERS

