


Primus 15mm Diverter Bath Mixer with Shower Duplex **PBF5**

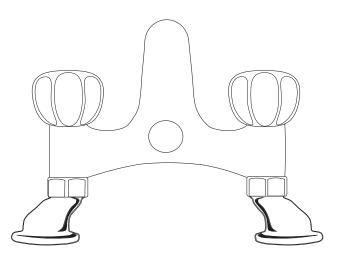




Congratulations on your purchase of this high quality product from Foreno Tapware. Please read the following before installation and retain (along with your receipt) for future reference.

TECHNICAL SPECIFICATIONS

Suitable for All Pressures

Minimum Pressure = 35kPa Maximum operating Pressure = 500kPa Maximum operating Temperature = 65 deg. Celsius

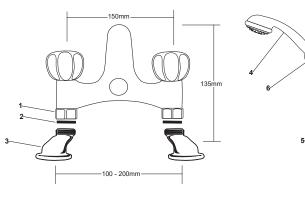

For domestic use only.

CONFIGURATION

Mains Pressure systems Add the flow regulator between

the hose and the handpiece as

shown in the diagram. This will



4=Shower Handset 5=Shower Hose 6=Wall Hook

comply with the WELs rating on the box for mains pressure. Remove the valve from the cold offset side.

- Unequal Low Systems The offset containing the regulator valve should be installed on the cold supply. Discard the WELs flow regulator or save for future use if upgrading to a mains pressure system.
- Equal Low systemsRemove the valve from the cold offset side. Discard the WELs flow regulator or save for
future use if upgrading to a mains pressure system.

INSTALLATION

For pressures exceeding 500kPa install a pressure reducing valve. Failure to do so may void the warranty.

- Once the bridging nipple has been cut to length and fitted to the in-wall wing-backs, wind thread tape around the protruding spigot until the thread pitch is barely raised.
- Screw on offsets (see diagram, item 3) and adjust width to match the faucet body back-nuts (item 1).
- Fit mounting washers (item 2) to the faucet body back-nuts (item 1) and tighten back-nuts on to offsets. NB: Do not over-tighten, no thread tape is required.

Turn on water supply. Check for leaks.

WARRANTY

•

Please refer to our website for warranty information: www.foreno.co.nz/warranty

In the unlikely event that this product fails during its warranty period, phone our Customer Service team immediately on 0508 FORENO (0508 367 366) – as unauthorised removal of the product may void the warranty.

CARE AND MAINTENANCE

Chrome-plated finishes should not be cleaned with astringent, abrasive or citric cleaners. A soft, damp cloth is recommended for cleaning. Mild soap solutions can also be used on occasion.

PROUD PARTNER AND SUPPORTER OF MASTER PLUMBERS, GASFITTERS AND DRAINLAYERS

