



# FORENO.

## PURITY Slide Shower Stainless Steel PUR040



9 421027 594418

Congratulations on your purchase of this high quality product from Foreno Tapware.  
Please read the following before installation and retain (along with your receipt) for future reference.

### TECHNICAL SPECIFICATIONS

#### Suitable for All Pressures

Minimum Pressure = 35kPa

Maximum operating Pressure = 500kPa\*

Maximum operating Temperature = 65 deg. Celsius

For domestic use only.

### CONFIGURATION




Mains Pressure systems Install the flow regulator as shown in the diagram below.

Unequal Low systems Install as supplied.

Equal Low systems Install as supplied.

### CONTENTS

- Rail with adjuster/holder
- Wall brackets
- Fixing kit
- 1.5m shower hose
- Supply elbow
- Shower handpiece
- Flow Regulator for Mains Pressure installation

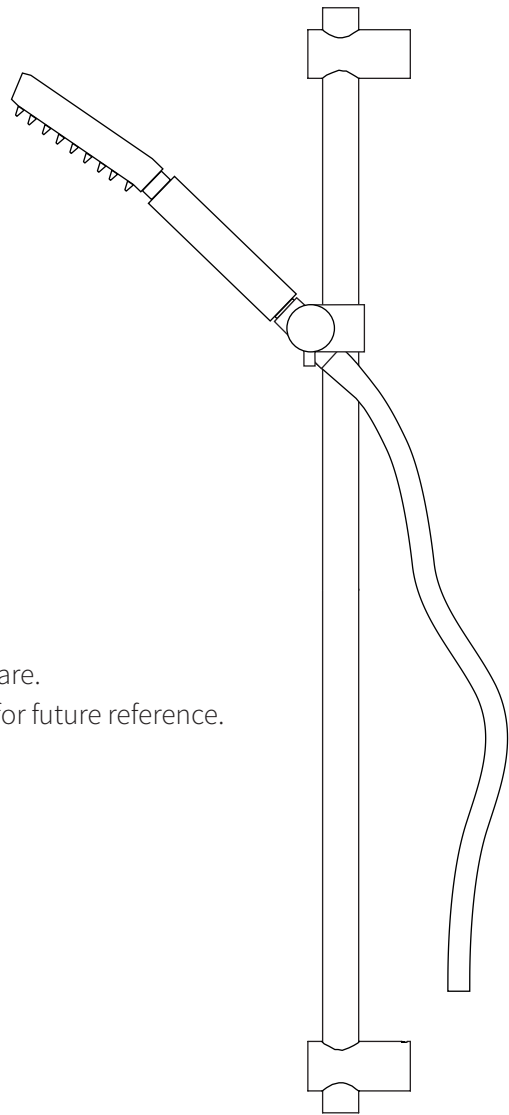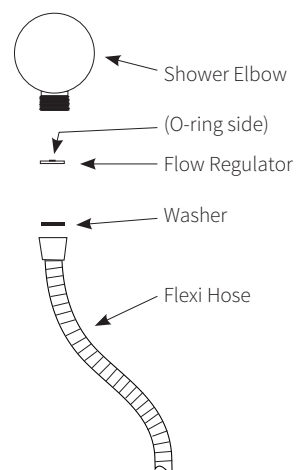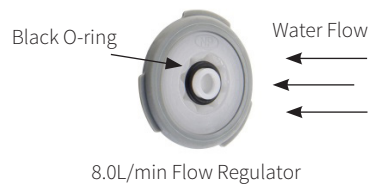

### INSTALLATION


**\*FOR PRESSURES EXCEEDING 500kPa INSTALL A PRESSURE REDUCING VALVE. THOROUGHLY FLUSH ALL PIPES TO ELIMINATE ANY REMAINING DIRT AND RESIDUE, AND INSTALL INLINE FILTERS. FAILURE TO DO SO MAY VOID THE WARRANTY.**

The shower rail is adjustable, however the distance between holes should be no more than 728mm apart.

Ensure main water supply is off before beginning installation.

ATTACH PROOF OF PURCHASE HERE

- Measure, mark and drill holes for wall brackets. **(1)**
- Insert the wall plugs into drilled holes. **(2)**
- Unscrew the grub screw **(6)** on each wall bracket **(5)** retaining the brass wall fitting **(3)**. Screw the wall fittings onto the wall using the screws provided **(4)**.
- Adjust the brackets on the rail to match the wall fittings. To adjust, unscrew the grub screws inside the top and bottom brackets, then slide the top and bottom bracket up or down to match the spacing of the wall fittings. Retighten the grub screw inside the bracket. Fit the bracket onto the wall fittings then re-tighten the grub screws **(6)** on the top and bottom brackets.
- Attach the wall plate **(7)** to the supply elbow **(8)** and screw onto the spigot on the wall **(9)**.
- Attach supply hose to supply elbow.
- Attach conical end of the supply hose to the shower handpiece.
- Turn on water supply.
- Check for leaks.

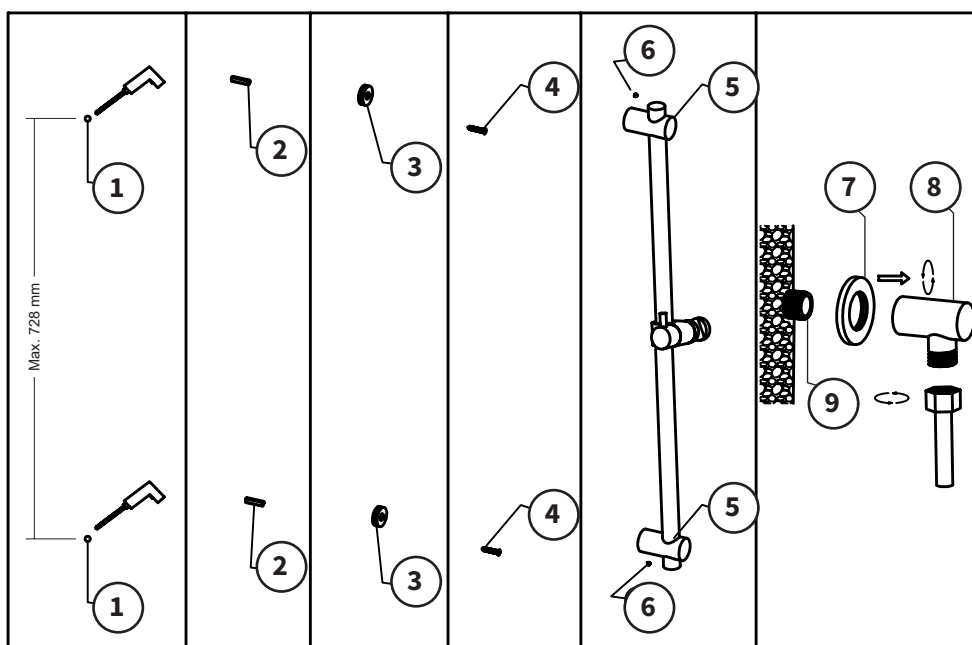

## WARRANTY

**PLEASE CALL US BEFORE REMOVING TAPWARE OR UNDERTAKING ANY REPAIR WORK.**

Please refer to our website for warranty information: [www.foreno.co.nz/warranty](http://www.foreno.co.nz/warranty)

In the unlikely event that this product fails during its warranty period, phone our Customer Service team immediately on 0508 FORENO (0508 367 366) – as unauthorised removal of the product may void the warranty.

## CARE AND MAINTENANCE

**SHOULD NOT BE CLEANED WITH ASTRINGENT, ABRASIVE OR CITRIC CLEANERS.**

A soft, damp cloth is recommended for cleaning (Not a Micro fibre cloth). Mild soap solutions can also be used on occasion.

PROUD PARTNER AND SUPPORTER OF MASTER PLUMBERS, GASFITTERS AND DRAINLAYERS

