



# X-Factor Floor Standing Bath Mixer **XFCFB**

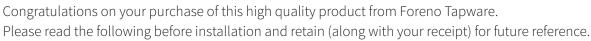

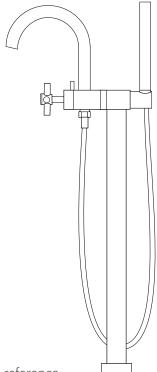



#### **TECHNICAL SPECIFICATIONS**

# **Suitable for Mains Pressure only**

Minimum Pressure = 150kPa

Maximum operating Pressure = 500kPa

Maximum operating Temperature = 65 deg. Celsius

For domestic use only.

## **CONFIGURATION**

Mains Pressure systems Install as supplied.

Unequal Low Systems Not suitable.

Equal Low systems Not suitable.

# **IMPORTANT NOTE**

- Maximum recessed depth of the base plate is 70mm (or 100mm to the top of the floor). This allows for the necessary stand pipe thread clearway.
- Ensure that the base plate is level when fitted to the floor joist or within the concrete recess.
- Ensure the base plate is securely bolted to the joist within a wooden floor installation, not screwed.
- Ensure that the connecting inlet and outlet fittings are rigid on the base plate before installing the stand pipes.

### **INSTALLATION**

# For pressures exceeding 500kPa install a pressure reducing valve. Failure to do so may void the warranty.

- Fit the base plate within the floor recess (noting points above), allowing for access to both inlet connections.

  NB: The distance is 150mm centre to centre between hot (left) and cold (right).
- Drill 35mm diameter holes (150mm centres) within the flooring for the chrome stand pipes.
- Screw the stand pipes all the way to the thread end.
- Slide the chrome decorative pipe covers on the stand pipes.

### ATTACH PROOF OF PURCHASE HERE

- Connect the faucet body to the stand pipes.
- Install faucet spout.
- Connect the shower hose and handset.
- Turn on water supply. Check for leaks.

## **WARRANTY**


Please refer to our website for warranty information: www.foreno.co.nz/warranty

In the unlikely event that this product fails during its warranty period, phone our Customer Service team immediately on 0508 FORENO (0508 367 366) – as unauthorised removal of the product may void the warranty.

## CARE AND MAINTENANCE

Chrome-plated finishes should not be cleaned with astringent, abrasive or citric cleaners.

A soft, damp cloth is recommended for cleaning. Mild soap solutions can also be used on occasion.

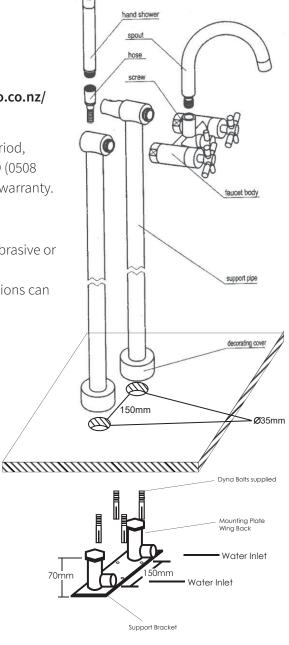

# PROUD PARTNER AND SUPPORTER OF MASTER PLUMBERS, GASFITTERS AND DRAINLAYERS





