FORENO.

LE TAP MINIMO II

Coil Pulldown Sink Mixer

LTM13LFCH Chrome

Congratulations on your purchase of this high quality product from Foreno Tapware.

Please read the following before installation and retain (along with your receipt) for future reference.



Suitable for Mains Pressure only

Minimum Pressure = 150kPa

Maximum operating Pressure = 500kPa* (As per NZ Building Code AS/NZ 3500.1)

Maximum operating Temperature = 65 deg. Celsius

For domestic use only.

CONFIGURATION

Mains Pressure systems Install as supplied.


Unequal Low systems This product is not suitable for this type of water pressure. Equal Low systems This product is not suitable for this type of water pressure.

INSTALLATION

*FOR PRESSURES EXCEEDING 500kPa INSTALL A PRESSURE REDUCING VALVE. THOROUGHLY FLUSH ALL PIPES TO ELIMINATE ANY REMAINING DIRT AND RESIDUE, AND INSTALL INLINE FILTERS. FAILURE TO DO SO MAY VOID THE WARRANTY.

SEE DIAGRAM ON FOLLOWING PAGE

- Position tap in **35mm** hole, making sure the Rubber seal (1) between mixer and bench is fitted within base-ring.
- Anchor to bench with underbench C-Clamp (4). The flat rubber gasket (2) should be against bench, followed by flat metal C-Washer (3), then C-Clamp. Screws on the C-Clamp can be tightened to firmly affix mixer to bench.
- Thoroughly flush all water pipes to eliminate any remaining dirt and residue and install inline filters.
- Attach Hot & Cold Flexihoses (6 & 7) to wall connections or filter stops. Maximum bend for flexible hose is
 35mm radius. Do not stretch, crush or twist hoses. Do not swage hose ends. Do not overtighten flexihose nuts.
- Push the Pull-down hose connection (8) into Fast-fit Connection (9), ensuring an audible click is heard.
- Ensure handpiece is fully retracted into holder, then attach underbench hose weight (10) to pull-down hose (11) at least 50mm above bottom of looped hose.
- Check that there are no obstructions to the hose or weight when pulling handpiece in and out and that the hose is not twisted.

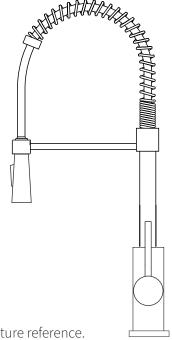

- The hose should not be wrapping around the flexihoses, or other underbench hoses or pipework.
- Turn on mains supply.
- Check for leaks, and for correct operation of multifunction handpiece.

Plumbers Note: Do not pressure test this mixer under static pressure.

WARRANTY

PLEASE CALL US BEFORE REMOVING TAPWARE OR UNDERTAKING ANY REPAIR WORK.

Please refer to our website for warranty information:

www.foreno.co.nz/warranty

In the unlikely event that this product fails during its warranty period, phone our Customer Service team immediately on 0508 FORENO (0508 367 366) – as unauthorised removal of the product may void the warranty.


CARE AND MAINTENANCE

SHOULD NOT BE CLEANED WITH ACIDIC, CAUSTIC/ALKALINE, ABRASIVE OR CITRIC CLEANERS.

A soft, damp cloth is recommended for cleaning (Not a Micro fibre cloth). Mild soap solutions can also be used on occasion.

See FORENO. website for full care instructions:

www.foreno.co.nz/tapware-care-instructions/

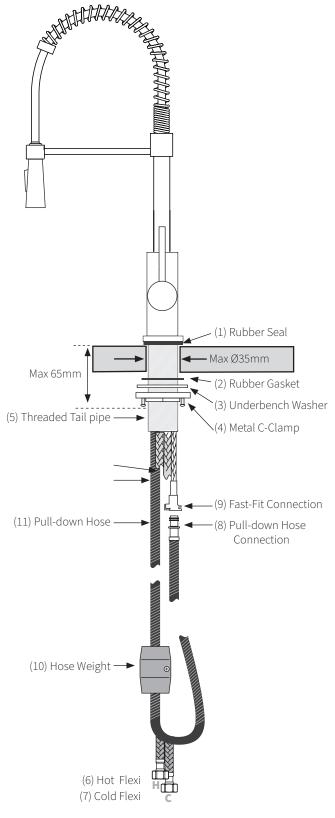

PROUD PARTNER AND SUPPORTER OF MASTER PLUMBERS, GASFITTERS AND DRAINLAYERS





